


*Question:* Why are 3-1/2" wide windows dangerous?

*Answer:* The potential for barcode failure and not being machine insertable highly probable.

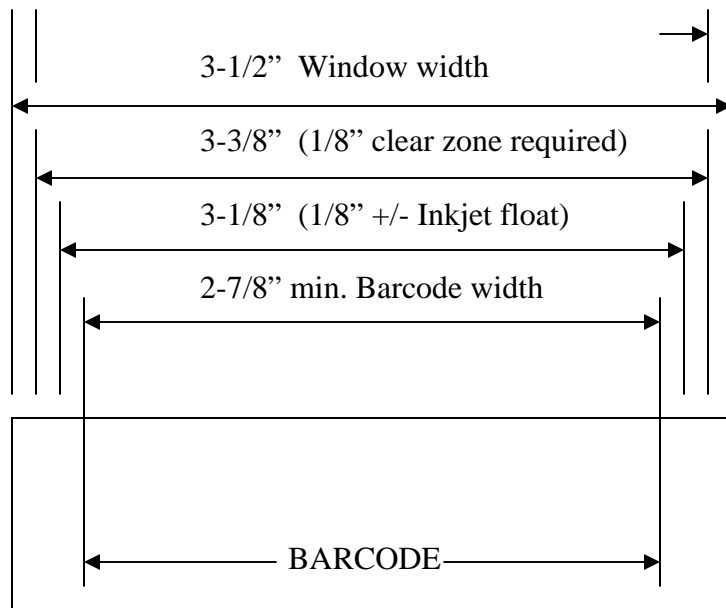

Only leaves 1/16" clearance each side of insert. This means that in order to protect the barcode discount, the inside addressed piece would need to be no more than 1/8" smaller than the width of envelope. The problem then is it is too tight to machine insert and would require manual inserting.